

The device selection buttons tell your remote whether you want to control your set top box or your television.

To turn your TV on or off, press the POWER button.

To turn your set top box and TV on or off, press the STB button and then press the Power button on your remote control.

Note: It is not necessary to turn your set top box off.

Note: Your remote control must have the remote code programmed in before it can send the correct signals for your TV. If the list of TV brand codes was not included in your installation pack, please contact Yadkin Valley Telecom.

If pressing Power turned the wrong device on or off, press the Power button again, press the appropriate device selection button (STB, TV, DVD, or AUX) and press Power once more.

Change Channels

The CH+/- button will change channels, up or down, one at a time.

The Number Pad can be used to directly enter a channel number.

GUIDE will display the Guide so you can find a program you like. If the program is on now, you tune to the channel showing it. If not, you can set a scheduled event to remind you when it does come on. If your set top box supports PVR, you can schedule a recording for the program.

The VOL+/- button will adjust the volume gradually. The MUTE button will toggle the sound on and off.

System Buttons

There are a number of buttons on your remote that display different features of your service.

MENU displays the MenuBar. The MenuBar provides quick access to every feature supported by your service.

INFO displays the InfoBar, a feature that lets you see information on what you're watching, what's coming on next, and what's on other channels.

EXIT allows your set top box to exit whatever screen you are viewing and returns you to normal TV viewing. If you ever get lost on a screen, it is always safe to press EXIT and then start over.