

# NOVA

## Remote Control Guide (US)



## Table of Contents

### OVERVIEW

- 2 Remote Control
- 5 Controlling Your Devices
- 6 Program Remote to Control Your Devices
- 7 Auto Search Procedures
- 8 Setup Keys Punch Through Procedures
- 8 Reset Punch Through Procedures
- 8 Reset Procedures

### POWERING UP

- 9 Setting up Remote Control

### APPENDIX

- 10 Troubleshooting
  - 11 Device Codes: Audio-Amplifier
  - 11 Device Codes: Audio-Accessory
  - 11 Device Codes: Audio-Receiver
  - 12 Device Codes: Television
  - 15 Device Codes: TV Combo
  - 16 Device Codes: Video-VCR
  - 16 Device Codes: Video-DVD
  - 17 Device Codes: Blu-Ray Disc
- 
- 19 Declaration of Conformity

#### COPYRIGHT

©2014 Entone, Inc. All rights reserved. This document contains proprietary information protected by copyright. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without the prior written consent of Entone, Inc., 20863 Stevens Creek Blvd, Suite 300, Cupertino, CA 95014, U.S.A.

#### DISCLAIMER

IF THIS PRODUCT DIRECTS YOU TO COPY MATERIALS, YOU MUST HAVE PERMISSION FROM THE COPYRIGHT OWNER OF THE MATERIALS TO AVOID VIOLATING THE LAW WHICH COULD RESULT IN DAMAGES OR OTHER REMEDIES.


#### TRADEMARKS

Entone and the tagline "Connecting the Home" are trademarks of Entone, Inc. All other trademarks or registered trademarks belong to their respective owners.

#### CHANGES

The material in this document is for information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, Entone, Inc. assumes no liability resulting from the use of the information contained herein. Entone, Inc. reserves the right to make changes in the product design without reservation and without notification to its users.

# OVERVIEW REMOTE CONTROL

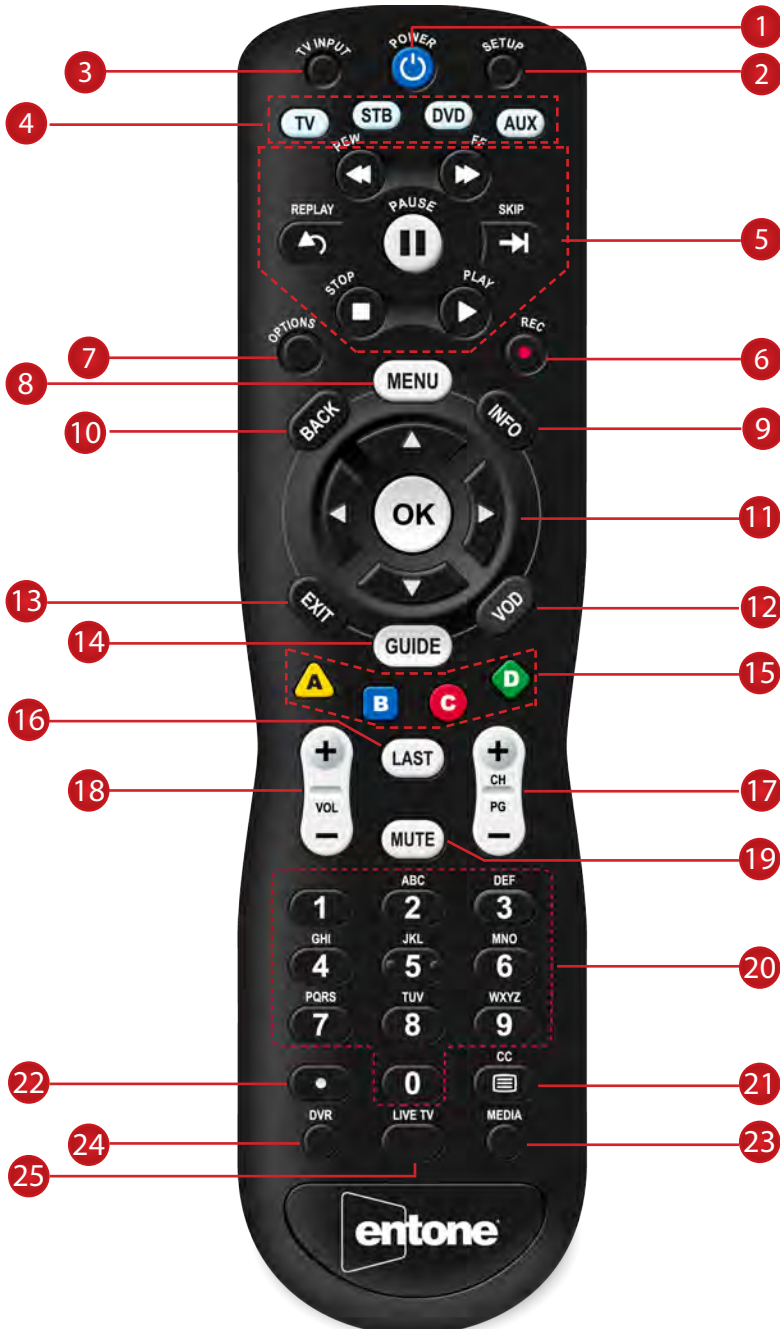

Button(s)	Description
1	POWER Switches the power on/o for the currently selected device Switches STB to power on or standby mode
2	SET UP Set up remote for TV
3	TV/ INPUT Changes the current A/V input of the selected device programmed (i.e. TV or AUX)
4	DEVICE CONTROL TV: Select to control TV (if programmed) STB: This button is pre-programmed to control the Entone device DVD: Select to control DVD (if programmed) AUX: Select to control another device (if programmed)
5	TRANSPORT KEYS REPLAY: Goes back approx. 30 seconds REW: Rewinds video FF: Fast forwards video SKIP: Advances ahead in 30 second increments PAUSE: Pauses video PLAY: Plays video or resumes a paused program STOP: Stops playback of video
6	REC Starts or stops recording a program
7	OPTIONS Provides additional options for certain on-screen menu or highlighted item*
8	MENU Displays on-screen menu or home screen
9	INFO Displays on-screen information about the current TV / VOD / DVR program
10	BACK Goes back one level within menus *
11	NAVIGATION ARROW KEYS: Navigates within the on-screen guide/menus OK: Executes the currently selected menu option LEFT/RIGHT: Rewinds/Fast forwards video
12	VOD Feature enabled by your service provider (contact service provider for details)
13	EXIT Exits the current menu item or back to LIVE TV
14	GUIDE Displays the on-screen program guide

Availability of certain features is dependent on your service provider

Button(s)	Description
15 SHORTCUT	Color-code buttons correspond to features that are enabled by your service provider (contact service provider for details)
16 LAST	Changes channel to the previously viewed channel
17 CH/PG	Changes channel up/down or pages up/down within the on-screen program guide
18 VOL +/-	Increases or decreases TV volume
19 MUTE	Turns TV volume on/off
20 NUMBER KEYS	Allows direct access to specific channels and menu items
21 CC	Toggles closed captioning on/off
22 DOT	Used when entering a period in certain channels Displays on-screen keyboard for certain applications
23 MEDIA	Feature enabled by your service provider (contact service provider for details)
24 LIVE TV	Feature enabled by your service provider (contact service provider for details)
25 DVR	Feature enabled by your service provider (contact service provider for details)

## CONTROLLING YOUR DEVICES

The Nova remote control can be used to control other devices (e.g. TV) as well. It uses InfraRed (IR) light signals to control other devices. IR signals travel only short distances (10 meters or less), and cannot go through walls or other solid objects. You must point the remote directly at these devices, with no objects blocking the line of sight.



## PROGRAM REMOTE TO CONTROL YOUR DEVICES

You can program the Nova to control other devices by

1. Locate the device code for your device in the Device Codes table provided in the Appendix starting on page 11. If you cannot find the device code for your device or it does not work after trying the listed device codes for your device brand, then you can try the auto search on page 7.
2. Turn on your device.
3. On the remote control, press the Device Control key (TV / STB / DVD / AUX) to choose the device mode.
4. Press the "SETUP" key and the LED blinks twice.
5. Enter the five-digit device code for your device. If you perform this procedure correctly, the LED will blink twice. Otherwise, it has a long blink.
6. Press "Power" key. If your device turns off, setup is complete.
7. If your device does not turn off, repeat this procedure using the next code for your device brand.

Record working codes here

TV code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
DVD code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
AUX code	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>

## AUTO SEARCH PROCEDURES

If your device does not respond to the remote control after trying all device codes listed for your brand, or if your brand is not listed, try searching for your device code as follows:

1. Turn on your device.
2. On the remote control, press the corresponding Device Control key (TV / STB / DVD / AUX) to choose the device mode.
3. Press and hold "SETUP" key until the LED blinks twice.
4. Press number keys "9" - "9" - "1".
5. Press "Power" key.
6. Press "CH +" key repeatedly until your device turns off.
7. Press and hold "SETUP" key until LED blinks twice to save the working code.

## KEYS PUNCH THROUGH SETUP PROCEDURES

By default, a key pressed on the remote control is sent to the selected device mode only. The punch through function allows specific keys to be sent to a particular device. (For example, the volume +/- key may need to be sent to the AUX device instead of the TV).

1. On the remote control, press and hold the "SETUP" key until the LED blinks twice.
2. Press number keys "9" - "7" - "8".
3. Press source device mode, e.g. TV.
4. Press keys to punch through, e.g. VOL + / -, MUTE.
5. Press target device modes, e.g. STB, DVD.
6. Press and hold the "SETUP" key until the LED blinks twice.
7. LED has a long blink in case of error.

## RESET PUNCH THROUGH PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice
2. Press keys "9" - "7" - "8"
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

## RESET PROCEDURES

1. Press and hold the "SETUP" key until the LED blinks twice
2. Press keys "9" - "7" - "7"
3. Press and hold the "SETUP" key until the LED blinks twice.
4. LED has a long blink in case of error.

## POWERING UP SETTING UP REMOTE CONTROL

1. Locate the two AA batteries and remote control in the accessory box
2. To open the battery cover, press down on the battery cover latch and slide it off
3. Insert the AA batteries, matching the "+" and "-" marks on the batteries to the "+" and "-" marks on the interior of the remote control
4. Snap the battery cover back onto the remote control







Magnavox	30189, 31189, 31831	Thorens	31189	Aventura	00171		01909, 00672, 00154	Gateway	01755, 01756		01564, 01326,
		Toshiba	31788, 31123	Baysonic	00180		02241	GE	00451, 01547,		02002, 01423,
Marantz	31289, 32114, 30189, 31189	Venturer	31390	Bell & Howell	00154	Daytek	01403, 01863,		01447, 01347,		01892, 01517,
		Vtrek	32426	BGH	04029, 00898,	Dell	01264		00051, 00178,		00171, 00463,
McIntosh	31289	Wards	30158, 30189		04070, 02414,		01264		00765		01385, 01660,
Micromega	31189	Yamaha	32061, 32467,		00876, 03485,	Denon	00145	General	00451, 01547,		01963, 02184,
Myryad	31189		33030, 30176,		04028, 04030	Digital	01765	Electric	01447, 01347,		02416, 02751,
Nakamichi	31313		31276, 30376,	Blue Sky	02153, 03997	Lifestyles			00051, 00178,		03227
Norcent	31389		33580, 31815,	Bradford	00180	Disney	01892, 01665		00765	Inteq	00017
Nova	31389		31376, 30186	Britânia	02414	Dukane	01398	GFM	00171, 01665,	iRIS	02189
Onkyo	31805, 31320, 32730, 32503, 30135, 31298	Zenith	31293, 32197	Broksonic	00463, 01935, 01938, 01892	Dumont	00017		01963, 01886,	IRT	00451, 01661
						Durabrand	00463, 00171,		01864, 01865	iSymphony	03429, 03382,
							01570, 01665,	Gibraltar	00017		03118, 03094,
Optimus	31023, 30186	<b>TELEVISION</b>		CCE	03782, 04091,		00178, 00180	GoldStar	00178		03863
Panasonic	32967, 31275, 31288, 31633, 32452, 33055, 33309, 31763, 32745, 32105, 31308, 31676	888	04159		00623, 04092		02049, 01463, 02184	GPX	03980, 03977,	JC Penney	01347, 00051,
		Acer	01339, 04143	Celera	00765				03196		00178, 00156
		Admiral	04030, 03485,	Champion	01362				01369, 01029	JCM	02189, 02256
			04111, 00093,	Changhong	03814, 00765	Electrograph	01755, 01623	Gradiente	00672	Jensen	01326, 03204,
			00463	Cineral	00451	Electrohome	00463, 01570,	Grundig	00180		00761
		Advent	00761, 01570	Citizen	01935		01670	Grunpy			
		Affinity	03717, 03716,	Clarion	00180	Electron	02466, 02855	Haier	01749, 02309,	JVC	01774, 01601,
Philco	31390, 31831		03870, 03577	Claris	03807	Elektra	00017, 01661		01748, 03382,		02321, 02271,
Philips	30189, 32459, 31831, 32289, 31266, 32311, 31189	Aiwa	01362	Coby	03478, 03627,	Element	03559, 01687,		01753, 03429,		01253, 00053,
		Akai	00702, 01675,		02315, 02344,		02183, 02964,		02293, 02876,		03650, 00463,
			00812, 01385,		02306, 02314,		01886		03987, 04120,		01670, 03841,
			00672, 01935,		02345, 01634,	Elite	03867		01570, 03204		04070, 02264,
Pioneer	31123, 31935, 31384, 32432, 31023, 32612	Alfide	00672		02338, 02326,	Emerson	01864, 01394,	Hallmark	00178		00650, 01892
		America	04179		02340, 03629,		03623, 00171,	Hannspreue	01348, 02786,	KC	04182
		America Action	00180		01538, 02347,		00463, 01963,		01351	KDS	01498, 01687
Polk Audio	31289, 30189	Anam	00180	Commercial	01447		00180, 01913,	Harvard	00180	KEC	00180
Proscan	31254	AOC	01589, 03720,	Solutions			01886, 00178,	Havermy	00093	Ken Brown	04056, 04099
RCA	31254, 32041, 32611, 32426, 33297, 32655, 31123, 31390, 32719, 33281, 31023		01365, 02014,	Contec	00180		01944, 00623,	H-Buster	03620, 03419	Kioto	00785
			04170, 02087,	Contex	04053		01661, 01665,	Helios	00865	KLH	00765
			02402, 01590,	Continental	01682, 03321,		02183, 00451,	Hello Kitty	00451	Kolin	01240
			02479, 02621,		04179		01909, 00154,	Hewlett	01642	Konka	01939, 01385
			04184, 04185,	Continental	03322, 03321		03559	Packard		Kreisen	00876
Samsung	31868, 32809, 33154, 32137, 31500, 31304		03707, 04101,	Electric		Emprex	01765	Himitsu	04179, 00180	KTV	00180
			04169, 04173	Coradir	02844	Encross	00876	Hisense	03519, 02183,	Legend	02397, 02309
		Aomni	01623	Craig	00180, 03423	Envision	01589, 01365,		01660, 02098,	Lexus	03638
Sansui	30189	Apex Digital	00765, 02397,	Crown	00180, 00672		02087, 02014,		01314, 00748,	LG	02731, 01423,
Sharp	30186		00748, 01217,	Crown Mustang	00672, 00898		02621		03382, 04029		01859, 02358,
Sherwood	31077, 31905, 31517, 32169, 33120	Ario	02397	Curtis	03577, 02855,	Epson	01122	Hitachi	01643, 03644,		00178, 03941,
		Astar	01738, 01531		03121, 02466,	Epworth	01362		00145, 01145,		03397, 04017,
		Asus	03340		02352, 03895,	EQD	02014, 02087,		01345, 03639,		02424, 01265,
Sherwood	32169		03340		02397, 03939,		02277		02433, 03697,		03979, 01753,
Newcastle		Atvio	03638, 03636,		01326, 03636,	EQD Auria	02014, 02087,		00679, 02215,		02612, 00017
Sony	31622, 31759, 30158, 32172, 31758, 31822, 32475, 31058, 32522, 32860, 33257, 33372, 33456		03653		04035, 01314,		02277		02981	LodgingStar	03147
		Audinac	00180		02559, 03228,	ESA	00812, 00171,	Hitech	01682, 01814,	LXI	00154, 00156,
		Audiovox	02413, 00875,		03382		01944, 01963		04179, 04183		00178, 00017,
			01865, 00180,	Curtis Mathes	00451, 00702,	Fair Mate	01326	Hiteker	03118		01347
			01564, 01868,		01661, 00093,	Favi	03382	HP	01642	MAG	01687, 01498
			01276, 01766,		00145, 00154,	Fisher	00154, 01362	Hyundai	03418, 01814	Magnasonic	01913
			01769, 02121,		01347	Fluid	02964	iLo	01665, 01684,	Magnavox	01866, 03623,
			03065, 00451,		00180	Frigidaire	02231		01990, 01463,		02372, 02597,
Stereophonics	31023		00623	CXC	00180	Funai	01864, 00171,		01286, 01394		01454, 01913,
Sunfire	31313		02087, 02014,	Cytron	01326		00180, 01271,	Imperial	04183		01944, 01963,
Teac	31390	Auria	02277	Daewoo	01661, 00623,		01394, 01963	Initial	01990		01455, 01990,
Technics	31308, 31633				00451, 00661,	Futuretech	00180	Insighia	02049, 01641,		03708, 00171,



	01365, 00051, 01755, 01867	Norcent	01365, 01589, 00748, 01590		01498, 01276, 01538, 01385,	Samsung	02051, 00812, 01632, 03993,	Starlite	00180	Vidikron	01398
Magnum	04179	Nordmende	03419, 03861, 03134, 03327,		01767, 03942,		00702, 00766,	STI	03793	Vidtech	00178
Marantz	01398, 01454		03767, 03835		04035, 01687,		00650, 00178	SunBriteTV	02337, 01610,	Viewsonic	02014, 02087,
Matsushita	00051, 00250, 00650	Norwood Micro	01286		02121, 00765,	Sansei	04030, 00451		02528		03706, 00864,
Maxent	01755, 01757	NuVision	02158, 01657		00865, 01314,	Sansui	00463, 01892,	Superscan	00864, 01944,		01330, 01627,
MB Quart	01868	Ölevia	01610, 01240,		01766, 04074,		03540, 01670,	Supersonic	00093, 00171		01640, 01755,
Megatron	00145, 00178		01331, 01144		01286, 01326,		01935, 01463,		03593, 03154,		02049, 02111,
Memorex	00463, 01570, 01670, 01938, 00178, 01892,	Onwa	00180	Portland	02002		03564, 01938,		03595, 03204,		01542, 01564,
	01665, 00150, 00154, 01687,	Optimus	00250, 01927, 01913, 01924,	Prima	01661, 00451		01409, 04053,	SVA	03894		01578, 01742,
	01924, 01927,		00154, 00650,	Proscan	01753, 00761,		03377, 00171,		01963	Viore	01365
MGA	00150, 00178	Optique	00679		01749	Sanyo	03559	Sylvania	01864, 01886,		02352, 03382,
Microsonic	01326, 02483, 03328, 03419,	Optonica	02189		02183, 03382,		00154, 03488,		00171, 01963,		03118, 03429,
	03679	Orion	00093		03577, 02256,		03697, 03861,		01944, 01913,		02104, 03863,
Midland	00017, 00051		00463, 01463,		01447, 03332,	Sceptre	00799, 00088		01394, 01665,		02496, 03094,
Mintek	01990	Panasonic	01938, 03485,		03717, 03895,		03899, 02528,	Symphonic	01271, 01314	VisionQuest	03154
Miray	03847, 02414,		01892, 03540,		03939, 01347,		02337, 01217,		00171, 01913,	Vivitek	01369
	02429, 03183,		03650		02147, 02746,		01360, 04139,		01944, 01963,	VIZIO	01758, 03758,
	04176, 04177,		01480, 01291,	Proton	03429, 03636,		00878		01394, 00180		02707, 02757,
	01814, 03322,		00250, 00650,	Proview	04035	Scotch	00178	Syntax	01610, 01240,		03415, 02512,
	00785, 03485,		02264, 00051,	Pulsar	00178	Scott	00178, 00180		01144, 01331		01756, 00864,
	04178, 00898,		01927, 01947,	Pyle	00017	Sears	00154, 00156,	Tandy	00093		00885
	03309, 03321		01636, 01924,	Pyle Home	02196		00171, 00178,	Tatung	01286, 02496,		03418
Misakai	00171		01941, 03825,	QuantumFX	02337	Seiki	03953, 02964,	TCL	01756	Vuon	03418
Mitsubishi	01250, 00150,		00053, 00093,	Quasar	00051, 00250,		03559, 03560,		02434, 03183,	Wards	00178, 00017,
Electric	00178, 01797,		00145, 00150,		01291, 01927,	Seiko Epson	00178		02429, 03426,		00156, 00051,
	00093	Panavideo	00154, 00156,		01924, 03899,	Seleco	01122		03847, 04176,		01156, 01347,
Mitsui	04179, 03658,	Panavox	01347	RadioShack	00650	Semivox	01351		04177, 02414,	Waycon	00156
	03638	PARK	03679		00180, 00178,	Semp	00180	Technics	03047, 00898,	Westinghouse	01712, 03579,
Motorola	00093	Penney	04057	RCA	00154	Semp Toshiba	01743, 00156		02403, 04178		03382, 00885,
Multitech	00180		02104		02746, 02932,		01743, 03793,		00051, 00250,		01300, 03949,
NAD	01156, 00156,	Philco	01347, 00051,		02434, 01447,	Sens	03469, 00156	Techwood	00650		02293, 03094,
	00178		00178, 00156		04214, 02247,	Serie Dorada	01865	Teknika	00051		03470, 00889,
Naxa	02104, 04093,		03426, 02414,		03577, 01781,	Sharp	03814	Telefunken	00180, 00150		00890, 01282,
	03154, 03382,		03639, 03697,		02187, 03382,		02360, 00818,		02414, 00702,		02397, 03908,
	03423		01665, 00171,		01547, 01347,		02951, 03394,		04025		00451, 00463,
NEC	01797, 01704,		01029, 01271,		03717, 03332,	Sheng Chia	01602, 02402,	TMK	00178		01217
	01398, 00876,		01963, 01394,		00679, 02403,	Sigmatc	03867, 00093	TNCi	00017	White	00623, 01661,
	02293	Philips	01661, 00145,		01661, 02429,	Silo	00093	Tophouse	00180	Westinghouse	01909, 00463,
NetTV	01755		01362, 00463		03147, 03378,		03477, 03423	Toshiba	01524, 01656,		01913
New Acoustic	01156, 00156,		01867, 02372,		03419, 00093,	Silo Digital	03794, 03477,		02724, 00156,	Wyse	01365
Dimension	00178		01454, 01455,		01385, 01868,		04182		03134, 01156,	Xoceco	01753, 00761,
NEX	01814		02374, 02597,		02002, 02183,		03794, 03477,		01256, 02006,		01749
Nexus	02183		02708, 01744,		02855, 03938,	Siragon	04057		01935, 01945,	Zenith	00017, 00178,
Electronics			01866, 02622,		03939, 00051,	Solé	01623		02684, 01743,		01145, 01265,
Nikko	00178, 00017,		00690, 00017,		00090, 03121,	Soneview	04179		03469, 01704,		01859, 01423,
	01347, 00154,		03623, 00171,	Realistic	03636, 04093		00810, 01300,		00650, 01369,		00145, 02612,
	00156		01944, 01365,		00154, 00180,	Sony	01685		01265, 00093,		01661, 02731,
Nimbro	02104	Pioneer	01990, 01394,	Recco	00178	Soundesign	00178, 00180	TruTech	00154		01365, 01909,
Noblex	01362, 03697,		01589		03847, 00898,	Soyo	01520	TVS	01665, 01723		02358, 00463
	04029, 03803,	Planar	01457, 00679,	RevolutionHD	01814, 03183	Spectroniq	01498, 01687	Upstar	00463	<b>TV COMBO</b>	
	04030, 00154	Polaroid	01260, 01398	Runco	01623	Speler	04041	US Logic	04182	Admiral	00463
			00679, 01589	Sampo	01398, 00017	Squareview	00171	Venturer	01286	Advent	01570
			01523, 01769,		01755	SSS	00180	Victor	01865, 01868	Affinity	03870, 03717

Akai	01675, 01935	JVC	02271, 01601,	Sceptre	02528, 04139,	Craig	20831	Logitech	22639		20744, 20490
America Action	00180		01670, 01774,		02337	Curtis	22235, 23052	Magnavox	20675, 21354,	Sanyo	20670
AOC	04173		01253	Sens	01865	Curtis Mathes	22331, 23925		20503, 20646,	Schneider	20646
Apex Digital	00765	Ken Brown	04099	Sharp	00818, 00093,	Daewoo	20833, 21169,		23488, 21506,	Semp	20503
Astar	01531	Konka	01939		02360		20869		20539	Semp Toshiba	20503
Audiovox	01865, 02413,	LG	02731, 01423	Superscan	01944	Days	22857	Marantz	22481, 20539,	Sensory	21158
	00180, 01766,	LXI	00154	Supersonic	03593, 01753,	Denon	22258, 22748,		22414, 23444	Science	
	01769, 03065,	Magnasonic	01913		02104, 03595,		20490	McIntosh	21273	Sharp	20630, 22250,
	01868	Magnavox	02597, 01913,		03894	DigitalMax	21738	Memorex	22213, 20831,		20675
Blue Sky	02153		01963, 01944,	Sylvania	01963, 01944,	Diplomat	22814		23153, 21270,	Sherwood	23052, 23837,
Broksonic	00463, 01935,		02372, 01866,		01913, 01886,	Directed Video	20717		22331		23925
	01938		03708, 01454,		01864, 01394	Disney	20675, 21270	Microsoft	22083, 22627,	Sonic Blue	20869
Citizen	01935		00051, 01990	Symphonic	01913, 01944,	Durabrand	23464		20522	Sony	21516, 21633,
Coby	02315, 02344,	Memorex	01938, 00463,		01963	Dynex	22596	Mintek	20717		21033, 20864,
	03627, 02340,		01670, 01924,	Toshiba	02006, 01935,	EletroVision	22822	NAD	20741		21070, 20772
	01538, 02347,		01927		01945, 02684,	Emerson	20675, 22213	Naxa	22235	SV2000	20675
	03202, 02314	Mintek	01990		03469, 01524,	Fisher	20670	Nesa	20717	Sylvania	20675
Continental	03321	Mitsubishi	00093, 00150,		00156, 01256,	Funai	20675	New Acoustic	20741	Symphonic	20675
Electric		Electric	00178		01656	Gateway	21158	Dimension		TCL	22587
Coradir	02844	Naxa	02104, 03382	Venturer	01865, 01868	GE	20717, 20522	NKS	22834	Teac	20790
Curtis	02855, 03895,	Nikko	00154	Viewsonic	02049, 00864	General	20717, 20522	Ölevia	22331	Technics	20490, 20703
	02466, 04035,	Nimbro	02104	Viore	03429, 02352,	Electric		Onkyo	22147, 21627,	Toshiba	23157, 22705,
	02559, 03636	Nordmende	03835		03094, 02104,	GFM	20675		20503, 21769		20503, 23857,
Daewoo	01909	Optimus	01927, 01913,		03382, 03118	Go Video	20869, 21044,	Oppo	22545, 21224		22277, 22006,
Durabrand	00463, 00171		01924	Westinghouse	01300, 01712		20741, 21075,	Panasonic	21641, 23641,		21510, 21769,
Dynex	02049, 02184	Orion	01938, 01463	White	01909, 00463,		20744, 20833,		20490, 21579,		21608, 22364
Electrohome	01670	Panasonic	01927, 01947,	Westinghouse	01913		21158, 20717		20703, 20503	TruTech	20675
Element	02964		01924, 01941,	Xoceco	01753	GoldStar	20741, 20869	Philco	20675, 20790	Urban	20503
Emerson	01886, 01864,		00250, 01291,	Zenith	00017, 01909,	GPX	22235	Philips	22056, 22434,	Concepts	
	01963, 01913,		01636, 01480,		00178	Greenhill	20717		20646, 21354,	Venturer	20790
	00463, 01944,		00051, 00093,	<b>VIDEO - VCR</b>		Grundig	20539		20539, 21506,	VIZIO	22563
	01394, 01909,		00178, 03825	Humax	20739	Harman/Kardon	20702, 20582,		23488, 20503,	Vtrek	22587
	00171	Philco	01963	Philips	20739		21229, 22927,		22084, 20675,	WB Electronics	22555
ESA	01944, 01963	Philips	02597, 01394,	TiVo	20739		23228		21158	Xbox	22083, 22627,
Favi	03382		01455, 02372	<b>VIDEO - DVD</b>		Hello Kitty	20831	Pioneer	22442, 22854,		20522
Funai	00171, 01394,	Polaroid	01769, 01523,	Accurian	20675, 21416	Hitachi	20664, 20573		21571, 20142,	Yamaha	22298, 20497,
	01963		01538, 03942,	Alco	20790	Hiteker	20672		20631		20539, 20545,
GE	00051		01766, 04074,	Allegro	20869	Initial	20717		21013		20490, 21354,
General	00051	Prima	02002	Amvox	22840	Insignia	22596, 22095,	Polaroid	20539	Polk Audio	20646, 23837,
Electric		Proscan	02256, 03895,	Apex Digital	20672, 20717		22428, 20675,	Presidian	20675, 21738		21416
GFM	01963		03429, 03636	Asahi	22615		21013, 20741	Proceed	20672	Zenith	20741, 20869,
GoldStar	00178	Pyle	02196	Audio Authority	22555	Integra	22147, 21769	Proscan	20522		20503
GPX	03980, 03977,	QuantumFX	02337	Audiovox	20790, 20717	Irradio	20646	RCA	20522, 21013,		
	03196	Quasar	00051, 01927,	BBK	21224	JBL	20702		22919, 22587,	<b>BLU-RAY DISC</b>	
Haier	01753, 02309,	RCA	01924, 00250	Bel Canto	21571	JVC	22365, 22855,		22213, 20717,	Curtis Mathes	22331, 23925
	03429, 01749,		04214, 02187,	Design			20623, 21164,		22871, 21769,	Denon	22258, 22748
	01748		02746, 02932,	Blaupunkt	20717		20867, 21602		23464, 20790	Harman/Kardon	22927, 23228
Hisense	03519		02247, 00093,	BuBuGao	21224			RE-BL	22555	Insignia	22596, 22428,
Hitachi	03644		01868, 02002,	California Audio	20490	Kawasaki	20790	Rio	20869		20675
iLo	01990		03382, 00051,	Labs		Kenwood	20534, 20490	Rotel	20623		22147
Initial	01990		01447	Cinea	20831	KLH	20717, 20790	Samsung	20199, 20573,	Integra	22365, 22855
Insignia	02049, 01641,	Samsung	02051	CineVision	20833, 20869	Konik	22691		22069, 21075,	JVC	22545
	01963, 02002,	Sansui	01670, 01935,	Coby	22494, 22746,	Lenoxx	22213		21573, 21470,	Lexicon	21602, 20741
	02416, 02751,		03564, 01938,		03377	Lexicon	22545		22113, 22269,	LG	20675
	03227, 01326,		03377			LG	21602, 20741,		22369, 22329,	Magnavox	20675
	01517, 01892						20869, 22135		22489, 21044,	Marantz	22414, 23444
iSymphony	03429, 03094	Sanyo	03488	Cougar	22693	LiteOn	21738, 21158,		22843, 22556.	Memorex	22331
							21416			Microsoft	22627

Ölevia	22331
Onkyo	22147
Oppo	22545
Panasonic	21641, 23641
Philips	22434, 22084
Pioneer	22854, 22442, 20142
RCA	23464
Samsung	20199
Sharp	22250
Sherwood	23052, 23837, 23925
Sony	21516, 20772
Sylvania	20675
Toshiba	23157, 23857, 22705
VIZIO	22563
Xbox	22627
Yamaha	22298, 23837

## Declaration of Conformity



**Federal Communication Commission Interference Statement**  
 This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the Following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The user is cautioned that changes and modifications made to the equipment without the approval of manufacturer could void the user's authority to operate this equipment.

**Déclaration de la Commission fédérale des communications (FCC) sur les Interférences**

Cet appareil a été testé et reconnu conforme aux limites pour appareils numériques de classe B, selon la partie 15 des règlements de la FCC. Ces limites sont destinées à fournir une protection adéquate contre les interférences nuisibles dans une installation résidentielle. Cet appareil produit, utilise et peut émettre de l'énergie radioélectrique et, s'il n'est pas utilisé conformément aux présentes instructions, peut causer des interférences nuisibles aux communications radio. Il est cependant impossible de garantir l'absence totale d'interférence dans une installation donnée. Si cet appareil cause des interférences nuisibles à la réception des signaux de radio ou de télévision (ce qui peut être vérifié en mettant l'appareil sous tension et hors tension), l'utilisateur est invité à corriger le problème en essayant l'une des solutions suivantes :

- Réorienter ou déplacer l'antenne de réception.
- Éloigner l'appareil du récepteur.
- Connecter l'équipement à une prise d'alimentation d'un circuit autre que celui du récepteur.
- Consulter le détaillant ou un technicien expérimenté en radio/télévision pour obtenir de l'aide.



Cet appareil est conforme à la partie 15 des règlements de la FCC. Son utilisation est régie par les deux conditions suivantes :

(1) cet appareil ne doit pas produire d'interférences nuisibles, et  
 (2) cet appareil doit accepter toute autre interférence, y compris celles qui pourraient entraîner un fonctionnement non souhaité.

L'utilisateur est prévenu que les changements ou modifications apportés à l'équipement sans l'autorisation du fabricant pourraient annuler le droit de l'utilisateur à utiliser cet équipement.

## Declaration of Conformity (Continued)

## Notes

	<p>For Industry Canada Industry Canada statement</p>
	<p>This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation</p>
	<p>Pour Industrie Canada Déclaration d'Industrie Canada</p> <p>Cet appareil est conforme à la norme RSS-210 d'Industrie Canada. Son utilisation est régie par les deux conditions suivantes :</p> <p>(1) cet appareil ne doit pas produire d'interférences nuisibles, et (2) cet appareil doit accepter toute autre interférence, y compris celles qui pourraient entraîner un fonctionnement non souhaité.</p>



©2014 Entone, Inc. Entone, Nova and connecting the home are trademarks of Entone, Inc. Other company, product, and service names may be trademarks or service marks of others. All information contained in this document is subject to change without notice. Information contained in this document is provided on an as is basis. In no event will Entone be liable for damages arising directly or indirectly from any use of the information contained in this document. Subject to change without notice.